

## Auxiliary Controls

### **Windscreen wipers/washers**

- On right hand side of steering column
- Lift up for 3 speeds
- Pull towards you for rear wipers
- Press button for washers

### **Side/Head Lights**

- Rotary switch on right hand side of dashboard
- Turn clockwise
  - 1st position - side lights
  - 2nd position – headlights
    - Always drive on headlights
- Main beam
- Indicator arm - pull towards you
- Dashboard warning light

### **Fog Lights**

- Rotary switch on right hand side of dashboard
- Only works when lights are on
- Pull out
  - 1st position - front fog lights
  - 2nd position - hi intensity rear fog lights
- Dashboard warning light
- Visibility must be less than 100 m

### **Hazard lights**

- Push switch in centre of dash board
- Operates all four indicators
  - Only use in emergency, stopping on motorways
  - Do not use for illegal parking

### **Windows**

- Side windows
  - 2 switches on drivers arm rest
  - Up/down - both sides
- Front/Back windows
  - Demist
  - 2 switches in front of gear lever

### **Gauges**

- Speedometer
- Rev Counter
- Temperature
- Fuel