

Foot Controls

Accelerator (gas)

- Right hand pedal
- Operate by right foot
- Controls fuel to the engine
- Requires only light pressure

Brake

- Centre pedal
- Operate by right foot
- Operates on all 4 wheels
- Switches on rear brake lights
- Progressive braking
 - Light pressure
 - Gradually press harder
 - Reduce pressure just before stopping

Clutch

- Left hand pedal
- Operated by left foot
- Connects the engine to the gearbox
- Used when moving off, changing gear, manoeuvring
- Pressed down fully & quickly, but released slowly
- Biting point – where the engine just starts to drive the car

Dual Controls

- Used in an emergency or demonstration
 - Handbrake/neutral before handing back control
 - Will explain use