

Hand Controls

Parking Brake

- Only use when stationary
- Only operates on 2 wheels(back)
- Doesn't activate brake lights
- Press in button when applying
- Lift up then press in button when releasing

Gear Lever

- Changes gear to match engine speed to road speed
- Neutral
 - Middle position
 - Moves sideways
 - No drive-safe
- Look ahead when changing gear
- Palming method
 - 1st - Most powerful
 - Moving off
 - Manoeuvres
 - 2nd & 3rd Working gears
 - Traffic and town
 - 4th & 5th – Cruising gears

Steering Wheel

- Hold lightly
- 10 to 2 or ¼ to 3
- Keep 2 hands on wheel
- Pull push method
- Don't cross hands past 6 & 12 o'clock
- Avoid dry steering (car stationary)

Indicators

- On left side of steering column
- Move lever same direction as steering(turning)
- Orange lights front and back
- Shows other road users intentions

Other controls

- Lights, wipers, demist controls etc.